

Installation Instruction For Rigid & Flexible Coupling



1. Pipe preparation

Check pipe end for proper groove dimensions and to assure that pipe end is free of indentations and projections that would prevent proper sealing.



2. Lubricate gasket

Check gasket to be sure it's compatible for the intended service. Apply thin MECH Pipe Joint Lubricant to the outside and sealing lips of the gasket.



3. Gasket installation

Slip the gasket over one pipe, making sure the gasket lip does not over-hang the pipe end.



4. Alignment

After aligning two pipe ends together, pull the gasket into position, centering between the grooves on each pipe. The gasket should not extend into the groove on either pipe.



5. Housing installation

Remove one bolt&nut and loosen the other nut. Place one housing over the gasket, making sure the housing keys fit into the pipe grooves. Swing the other housing over the gasket and into the grooves on both pipes. Re-insert the bolt and connect two housings.



6. Tighten nuts

Firstly hand tighten nuts and make sure oval neck bolt completely fits into bolt hole. Then securely tighten nuts alternatively and equally to the specified bolt torque by using spanner.



7 a. Assembly completed- Rigid Coupling

For Rigid Coupling, keep the gaps at bolt pads evenly spaced. Gaskets can't be seen visually.



7 b. Assembly completed- Flexible Coupling

For Flexible Coupling, two housings should be iron to iron connected. Gaskets can't be seen visually.



7 c. Assembly completed-Angle Pad Coupling

For Angle Pad Coupling, two housings should be iron to iron connected. Gaskets can't be seen visually.

Caution

Proper torquing of bolts is required to obtain specified performance.

- Over torquing the bolts may result in damage to the bolt and / or casting which could result in pipe joint separation.
- Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.

Specified Bolt Torque

ANSI BOLTS		
Bolt Size	Specified Bolt Torque	
Inch	Lbs-Ft.	N.m
3/8	30-45	40-60
1/2	80-100	110-135
5/8	100-130	135-175
3/4	130-180	175-245
7/8	180-240	245-325

Installation Instruction For Threaded & Grooved Mechanical Tee



1. Pipe preparation

Clean the gasket sealing surface within 16mm of the hole and visually inspect the sealing surface for defects that may prevent proper sealing of the gasket. Don't drill the hole on weld line.



2. Remove burrs

If any burrs or slug exists at the pipe hole, please remove them before assembly, to protect the gasket and avoid leakage.



3. Gasket installation

Insert the gasket into outlet housing making sure the tab in the gasket line up with the tab recesses in the housing. Align outlet housing over the pipe hole making sure that the locating collar is in the pipe hole.



4. Alignment

Align the strap around the pipe, insert the bolts and tighten the nuts finger tight.



5. Tighten nuts

Alternatively and evenly tighten the nuts to the specified bolt torque.



6. Assembly completed

There should be even gaps on two sides between upper and lower housings.

Caution

Proper torquing of bolts is required to obtain specified performance.

- Over torquing the bolts may result in damage to the bolt and / or casting which could result in pipe joint separation.
- Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.

Specified Bolt Torque

ANSI BOLTS		
Bolt Size	Specified Bolt Torque	
Inch	Lbs-Ft.	N.m
3/8	30-45	40-60
1/2	80-100	110-135
5/8	100-130	135-175
3/4	—	—
7/8	—	—

Installation Instruction For U-Bolt Mechanical Tee



1. Pipe preparation

Clean the gasket sealing surface within 16mm of the hole and visually inspect the sealing surface for defects that may prevent proper sealing of the gasket. Don't drill the hole on weld line.



2. Remove burrs

If any burrs or slug exists at the pipe hole, please remove them before assembly, to protect the gasket and avoid leakage.



3. Gasket installation

Insert the gasket into outlet housing properly. Align outlet housing over the pipe hole making sure that the locating collar is in the pipe hole.




4. Alignment

Attach the U-bolt from the other side and tighten the nuts finger tight.



5. Tighten nuts

Alternatively and evenly tighten the nuts to the specified bolt torque.

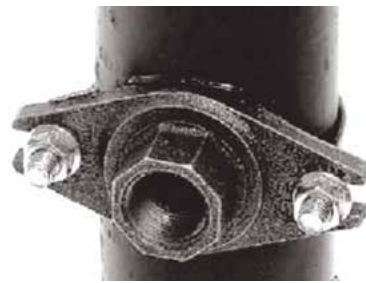

6. Assembly completed

Assembly completed.

Caution

Proper torquing of bolts is required to obtain specified performance.

- Over torquing the bolts may result in damage to the bolt and / or casting which could result in pipe joint separation.
- Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.

Specified Bolt Torque

ANSI BOLTS		
Bolt Size	Specified Bolt Torque	
Inch	Lbs-Ft.	N.m
3/8	20-30	30-40
1/2	80-100	110-135
5/8	100-130	135-175
3/4	—	—
7/8	—	—

Installation Instruction For Grooved Flange



1. Pipe preparation

Check pipe end for proper groove dimensions and to assure that pipe end is free of indentations and projections that would prevent proper sealing.



2. Lubricate gasket

Check gasket to be sure it's compatible for the intended service. Apply thin MECH Pipe Joint Lubricant to the outside and sealing lips of the gasket.



3. Gasket installation

Slip the gasket over pipe end, with the gasket opening side towards "A". Make sure the gasket sealing lip is even with pipe end.




4. Housing installation

Remove bolts and nuts, place two housings over the gasket, making sure the housing keys fit into the pipe grooves. Re-insert the bolts and hand tighten the nuts.



5. Tighten nuts

Securely tighten nuts alternatively and equally to the specified bolt torque by using spanner.

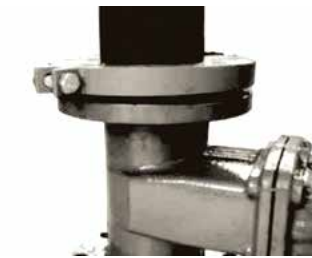

6. Connect mating flange

Align flange bolt holes with mating flange (or valve) bolt holes. Insert a standard flange bolt through bolt hole and hand tighten a nut. Insert another bolt opposite the first and hand tighten a nut. Continue this until all bolt holes are fitted. Tighten nuts evenly to specified bolt torque, so flange faces remain parallel. Assembly completed.

Caution

Proper torquing of bolts is required to obtain specified performance.

- Over torquing the bolts may result in damage to the bolt and / or casting which could result in pipe joint separation.
- Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.


Specified Bolt Torque

ANSI BOLTS		
Bolt Size	Specified Bolt Torque	
Inch	Lbs-Ft.	N.m
M10	30-45	40-60
M12	80-100	110-135
M16	—	—
M20	—	—
M22	—	—
M24	—	—

※ Self-lubricating rubber rings do not need to be lubricated


Installation Instruction for Quick Push Couplings

Note: Nuts are screwed onto the bolts to shipment from the factory, so the installer does not need to remove the bolts and nuts during installation in order to facilitate installation.

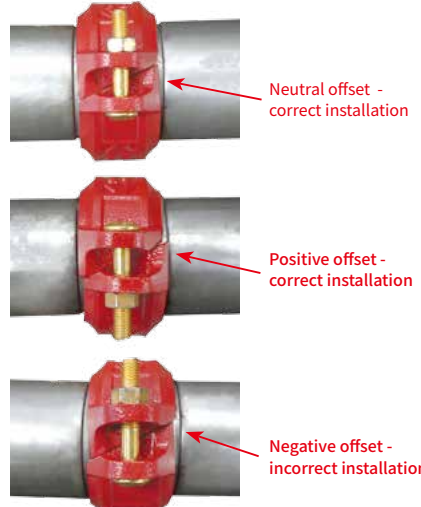1. Piping end checking The outer surface of the pipe from the end to the groove position must be clean and smooth, without burrs, depressions, bulges (including welding line), no peeling paint and rolling indentation, etc. Check before installation to ensure that there are no defects that affect the sealing of the gasket. The pipe end size should conform to the dimension table of the rolling or cut groove. The measurement dimension of the pipe end shall not exceed the maximum allowable flare diameter. 	5. Tighten the nut Use a torque wrench to alternately and evenly tighten the nuts at both ends of the coupling to achieve the rated torque and ensure that the oval necks of both bolts fall fully into the bolt holes. 
2. Gasket checking - Inspect the gasket to ensure that it is suitable for all working conditions. - MECH quick push couplings with pre-lubricating gasket are currently mainly used in the firefighting field. - If the customer applies it to other fields, it is necessary to use a non-pre-lubricating gasket, and installed it with lubricant or grease: apply a thin layer of lubricant or grease to the sealing lip edge of the sealing gasket and its outer surface. 	6. Couplings installed Check the joints of the pipes and ensure that both sides of the coupling are completely inserted into the pipe groove. There is no gap on both sides of the joint of the two coupling housing and no gasket squeezing ring is seen.  Warning: Before installing, removing, adjusting, or maintaining the quick push couplings, make sure the piping system is fully decompressed and drained of water.
3. One side of Pipe end connection Pushing the end of the grooved pipe or components into the joint, and the groove end must be inserted into the joint to let it contact the central spacer bars' edge of the sealing gasket. 	7. Offset notice Neutral offset occurs when the groove size matches the coupling diameter exactly. Positive offsets occur when the pipe groove is deep and the bolts are tightened; Negative offsets occur when the pipe groove is shallow and the bolts are not tightened. A neutral offset or positive offset is correct, but a negative offset is not allowed.  Neutral offset - correct installation Positive offset - correct installation Negative offset - incorrect installation
4. Another side of pipe end connection Inserting another pipe end or component from another side of the joint until the pipe end touches the spacer bars' edge of the rubber gasket's center. It is necessary to inspect visually to ensure that both sides of the coupling fit into the interconnection component's groove. Note: The coupling can be rotated to ensure that the seal gasket is properly positioned. 	


Flexible Coupling

1.A flexible coupling accommodates pipe deflection and or non-alignment as below:
If nominal diameter <DN200, deflection angle is $\geq 1^\circ$; If nominal diameter $\geq$ DN200, deflection angle is $\geq 0.5^\circ$ but $< 1^\circ$.

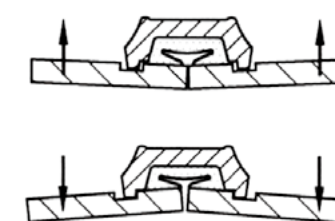


2.The C-shaped rubber gasket provides excellent self-sealing capabilities in both low and high pressure service as well as under certain vacuum conditions.


3.The design and construction of the coupling with elastomeric gaskets can provide significant noise and vibration absorption as well as seismic stress.

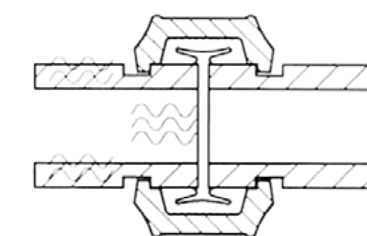



4.With the removal of just a few bolts you can easily access the system for cleaning, maintenance, changes or system expansion.

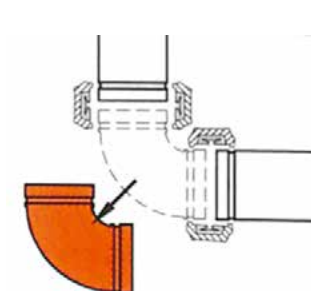

5.Coupling are non-directive and pipe can be rotated 360° during installation.

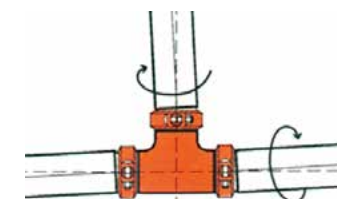


6.Coupling keys engage the full circumference of the grooves and provide significant pressure and end load restraint against pipe movement from internal and external forces.

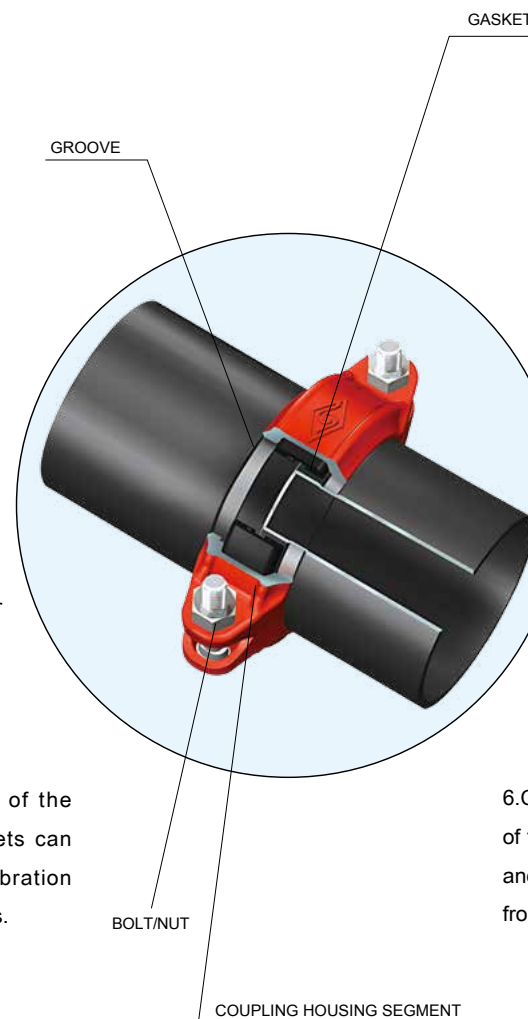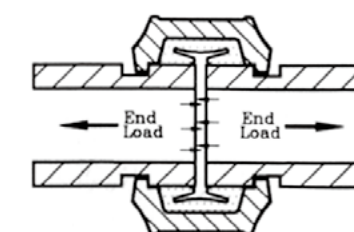

Rigid Coupling

1.The T&G mechanism in combination with a slightly shortened key diameter provides a mechanical and frictional interlock resulting in a rigid joint which reduces undesired angular movement.

2.The built-in teeth on the coupling grip the groove shoulder and serve to reduce linear movement.

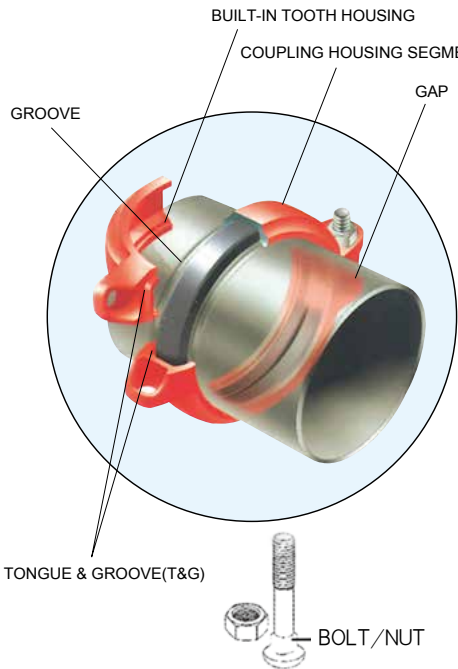


3.The T&G mechanism features a slight offset at the foot of the coupling halves which serve to protect the gasket from exposure.

4.With the T&G style coupling no metal-to-metal contact of the bolt pads is required. You will normally see a 1/16" - 1/8" (1.6mm to 3.2mm) gap between the bolt pads when installed.



Mechanical Tee Connection

The Mechanical Tee (3J, 3G, 3L) provide for a fast and easy grooved or threaded branch outlet and eliminate the need for welding or the use of a reducing tee and couplings. Simply cut a hole to the specified size at the expected location and fasten the mechanical tee to the pipe with the nuts and bolts provided. As the housing bolts are tightened, the pressure responsive gasket forms a leak-tight seal.

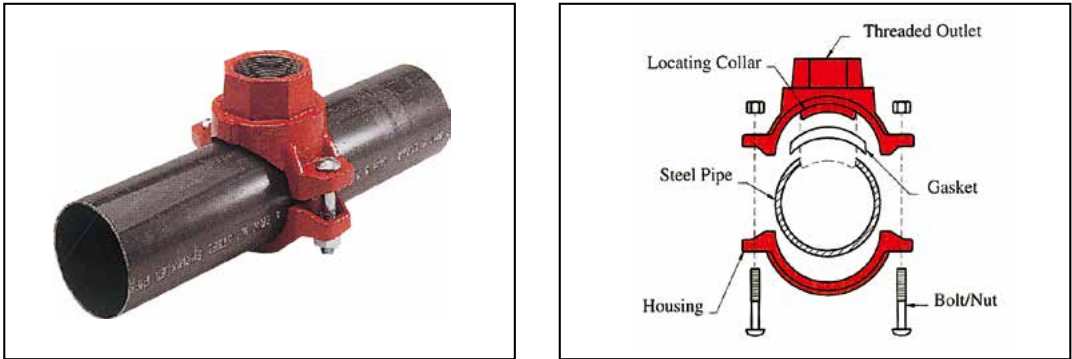

Movement

Each flexible design coupling can provide for pipe system movement up to the design maximum for the specific size and type coupling being utilized. Movement is possible in the coupling due to two factors: (1) designed-in clearance between the key of the coupling and the groove diameter and groove width, and (2) the gap between pipe ends joined by the coupling.

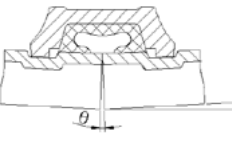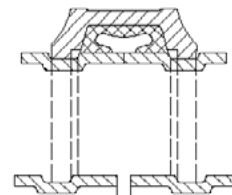

1.Linear Movement

Linear movement is accommodated within the coupling by allowing the pipe ends to move together or apart in response to pressure thrusts and temperature changes. The available linear movement provided by couplings is shown below:

size	1-1¼ (25-32MM)	1½-12 (40-300MM)
movement (CUT)	0-4.0MM	0-6.4MM
movement (Roll)	0-3MM	0-5MM

2.Angular Movement

Designed-in clearances allow limited deflection of the pipe joint within the coupling, without introducing eccentric loads into the coupling joint.

The maximum available angular movement of coupling joints is shown in the performance data for each coupling type. The amount of angular flexibility varies for each coupling size and type. For design purposes the published figures should be reduced by the below listed factors to account for pipe, groove and coupling tolerances.

size	1-3(IN)	4-12(IN)
Design factor	Reduce to 50%	Reduce to 75%

Flexible Couplings:
Linear Movement and
Angular Movement

Size		Linear Movement	Angular Movement	
Inch	mm	mm	Degree	mm/m
1	33.7	2	2°-45'	48
1 1/4	42.4	2	2°-10'	38
1 1/2	48.3	3.2	1°-54'	33
2	60.3	3.2	1°-31'	26
2 1/2	73	3.2	1°-27'	25
2 1/2	76.1	3.2	1°-12'	21
3	88.9	3.2	1°-02'	18
4	108	3.2	1°-51'	32
4	114.3	3.2	1°-36'	28
5	133	3.2	1°-41'	30
5	139.7	3.2	1°-19'	23
5	141.3	3.2	1°-03'	18
6	159	3.2	1°-18'	23
6	165.1	3.2	1°-05'	20
6	168.3	3.2	1°-05'	19
8	219.1	3.2	0°-50'	15
10	273	3.2	0°-40'	12
12	323.9	3.2	0°-34'	10